


## ConnectorView Plus – New Features


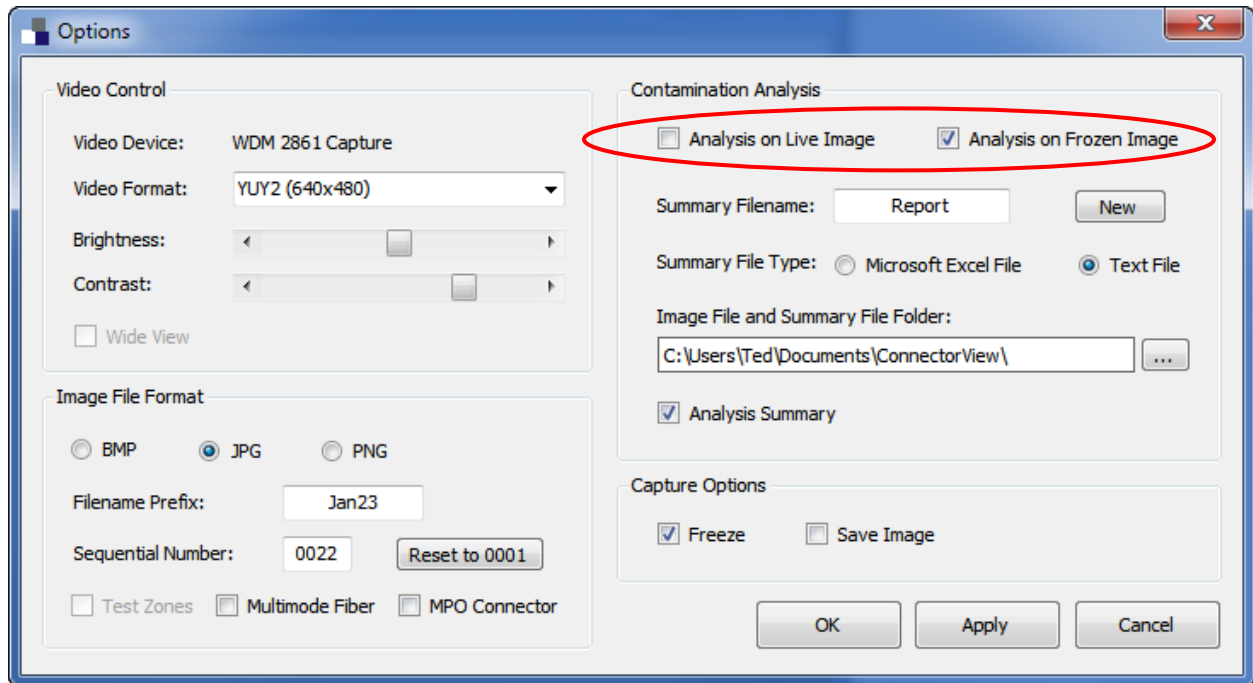


Choose whether to analyze a live image or analyze from the frozen image. If analyzing the frozen image the probe may be removed from the adapter or connector if you wish.

*Note: The frozen image must be active in order to analyze. You can not analyze already saved images.*


When you have selected “Analysis of Frozen Image” the [Analyze] button on the main screen will be active.

Click on the main window (or hit the [F12] function key) to freeze the image.

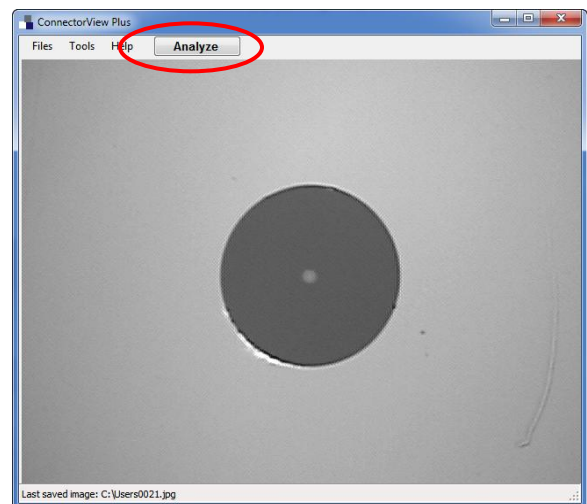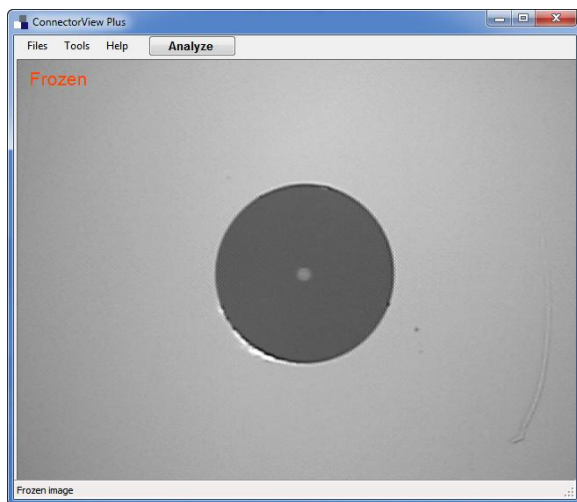


Then hit the [Analyze] button or the [Enter] key on you keyboard to do the analysis.

Clicking on the window a second time returns you to the live image.

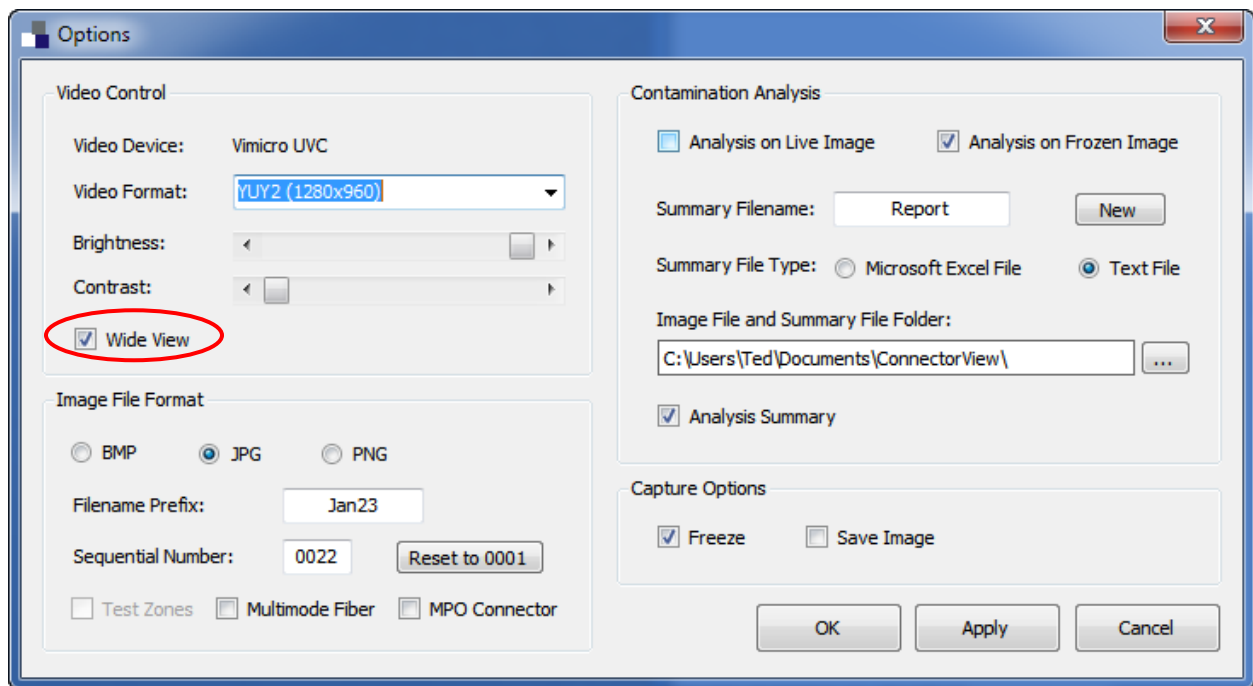

ConnectorView Plus can now work with the DI-1000L (wide view) scopes.

Check the Wide View checkbox in the Options window.

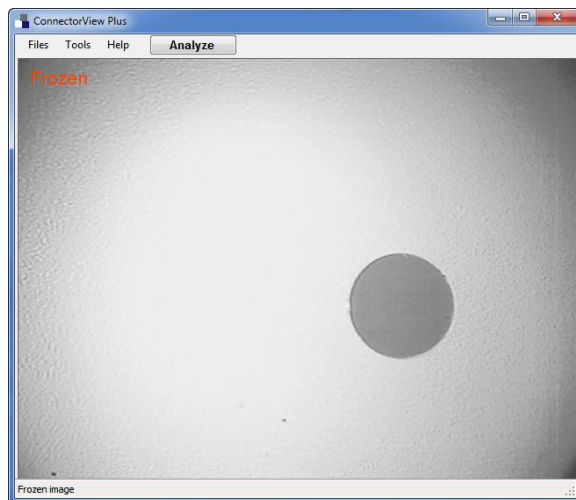

Here we are using the “Analysis on Frozen Image” setting. Analysis can also be do on the live image.

When you hit the [Analyze] button or the [Enter] key on your keyboard, the image will be enlarged, centered and analyzed.

